



### ViscoSense® Installation Guide lines

Make sure that the ViscoSense® housing is installed with the sensor position slot upstream of fuel oil flow direction.

ViscoSense® Sensor

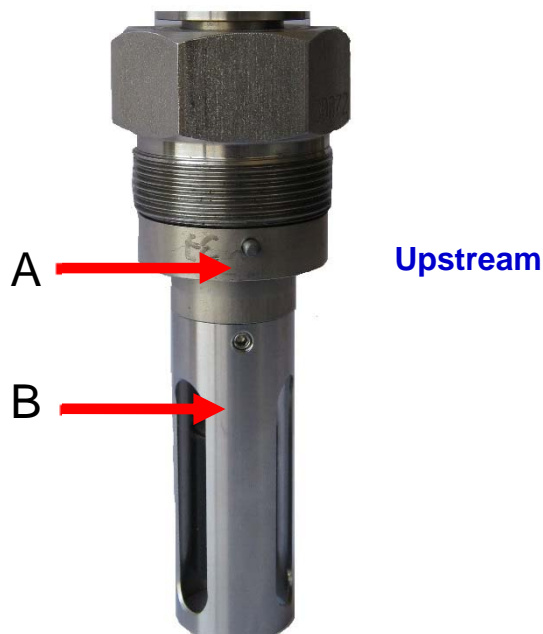

ViscoSense® housing

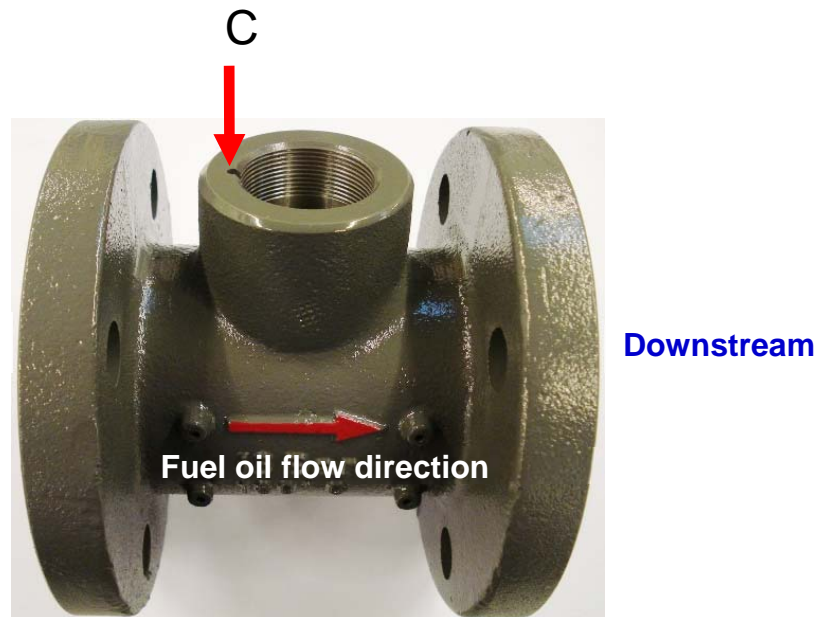

- A: Sensor position pen
- B: Sensor flow tube inlet
- C: Sensor position slot

**Note:**

1. The sensor flow tube must have a closed surface on the inlet side.
2. When the ViscoSense® housing is installed with the sensor position slot downstream of the flow direction, the ViscoSense® housing should be turned 180° in order to match the flow direction.
3. In the unlikely event that the Sensor position pen is missing always make sure that the sensor flowtube inlet faces towards the fuel oil flow.

Publ. No. SIG-900-GB-0718  
Supersedes SIG-900-GB-1113