


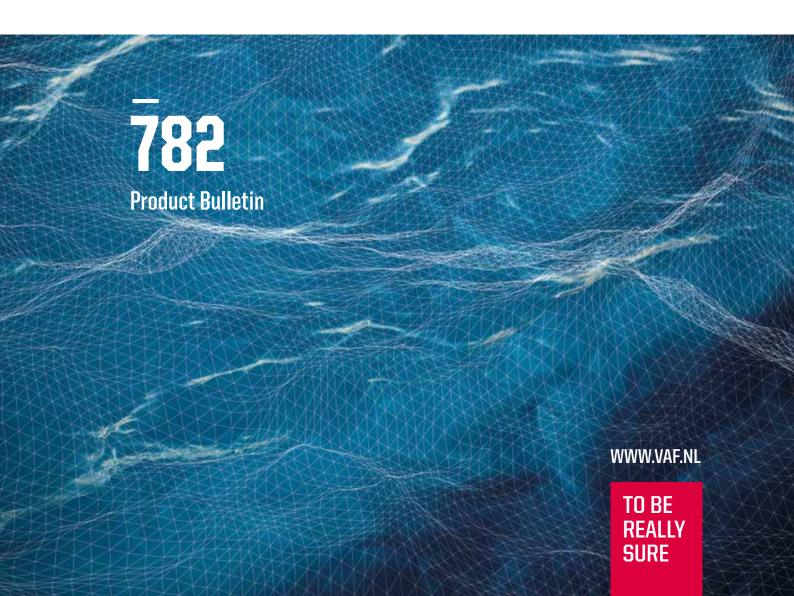

# ViscoSense®3/3D

Viscosity Measurement & Control Systems
Density Measurement enabling Mass Flow



## Introduction

With decades of experience VAF Instruments is the worldwide market leader for in-line viscosity measurement and control systems. ViscoSense®3 and ViscoSense®3D are the latest innovative developments in a long history of outstanding viscosity sensors for fuel oil applications. In this most demanding environment of diesel engines on board ships and in land based power plants, VAF Instruments has proven itself with high quality products and a comprehensive and professional customer support.

### Necessity of viscosity control

Most of the operating costs of a ship are fuel related. Therefore it is very important to use fuel in the most efficient way. A large variation in the quality and composition of fuel oil makes the behaviour of the fuel oil at higher temperatures difficult to predict. An optimal viscosity is needed for the best possible atomization of HFO in the engine, so the fuel will be burnt completely without remaining deposits. The measurement and control of the viscosity ensures an improved combustion efficiency, preventing engine damage and reducing cost of maintenance.

#### Mass flow measurement

In general fuel is bought in metric tonnes. Therefore, to be consistent, fuel consumption is more and more monitored in kilograms. Smart usage of (existing) VAF Instruments PD Flowmeters in the fuel system in combination with ViscoSense®3D enables mass flow measurement. In bunkering applications measurement of viscosity and density by ViscoSense®3D enables the detection of possible cappuccino effect.

#### Accuracy and reliability

ViscoSense®3(D) is a highly accurate viscosity sensor with a superior measuring principle. This patented measuring principle is based on a torsional vibration of a pendulum in liquid. The measured damping of this piezo-driven vibration is directly related to the viscosity, whilst frequency is related to the density. A built-in temperature sensor is used to measure the temperature at the same location where viscosity and density are measured. Due to the operating principle based on a torsional vibration, the measurement is insensitive to unwanted external influences. Flow velocity, flow direction and pulsations have no effect on the sensor operation. The robust sensor is designed to operate under the most difficult conditions in which faultless and stable viscosity and density measurements are required.

#### Cost-effective operation


The ViscoSense®3(D) sensor is developed to measure viscosity and density without interruptions and with low operating costs. Since the sensor does not actually move, it is not subject to wear and therefore it ensures a long lifetime and a maintenance free operation. The surface of the pendulum (which has undergone special surface treatment to improve its non-stick performances) in combination with a smooth edged design makes the sensor highly insensitive to fouling and easy to clean. The sensor is calibrated for life and the accuracy will be kept without the necessity of re-calibration. Due to its compact design, the sensor is suitable for easy installation in any new or retrofit system.


ViscoSense® is a registered trade mark of VAF Instruments.


## Principle of operation

The operating principle of the sensor is that of a torsion pendulum. The sensor consists of a stainless steel sensor head, attached to the base plate by means of a tubular torsion spring. In the head, one pair of piezo elements (driver piezos) actuates the pendulum at its torsional resonance frequency, while another pair of piezos detects the actual movement of the head. In a low viscosity medium, like air, the resonance frequency is in the range of 1600 Hz. In a high viscosity medium the movement of the head is damped by the liquid. Consequently, the resonance frequency slightly shifts towards lower frequencies, whilst the width of the resonance peak increases, which is a measure for the viscosity.

A ViscoSense®3D sensor head is equipped with a cross vane through which a small amount of fluid is increasing the mass moment of inertia. The frequency of the pendulum, which is dependent on the mass moment of inertia, is now directly related to the density of the fluid.

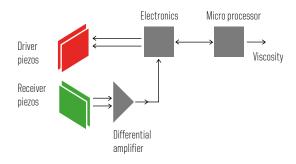

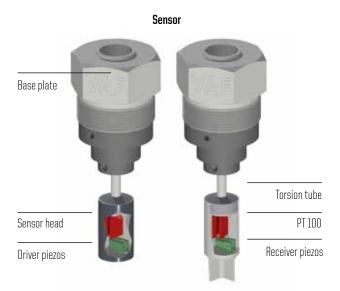

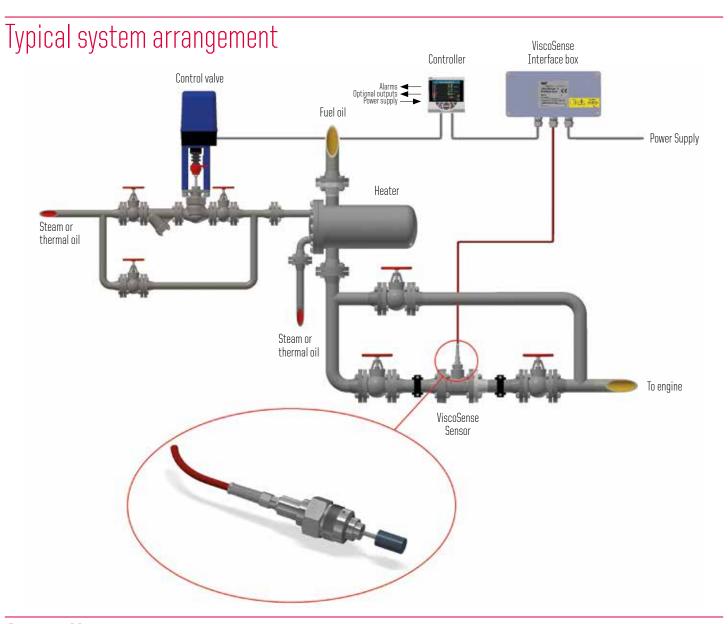

## Cost-effective solution

To enable mass flow measurement, only a small upgrade of your current system is required.



One ViscoSense®3D can be combined with one or multiple Flowmeters in the same fuel system, independent of configuration. Fuel consumption measurement by VAF Instruments' Positive Displacement Flowmeters in combination with density measurement by the ViscoSense®3D is a cost-effective solution that enables mass flow measurements with highest accuracy, reliability and repeatability.

## Features and benefits

As a result of the torsional vibration technique, the flow velocity has no effect on the measurement. External vibrations have no influence on the ViscoSense®3(D). In practice the smooth edged design of the sensor makes the system highly insensitive to fouling and easy to clean. In addition the closed-loop controlled torsional vibration principle is independent of ageing of piezo material, ensuring a long term stable and accurate measurement.

Features	Benefits	
Stable and accurate in-line measurement	Optimal burning efficiency and fuel consumption	
Stable and accurate in line measurement	Engine damage prevention and reduced maintenance	
Tausianal vihustian massauving muinciala	Reliable under all circumstances	
Torsional vibration measuring principle	Not influenced by vibrations, flow velocity or dirt particles	
No manifest wants	No preventive maintenance required	
No moving parts	Low operating costs	
Minimal load on components	No ageing and wear effects	
Chairless sheel 2101 mandulum	No wear due to corrosion	
Stainless steel 316L pendulum	Durable	
Smooth edged pendulum	Insensitive to adherence	
Compact light-weight construction	Easy to install	
Calibrated for life	Long and trouble-free operation	
Type approval from all major classification authorities	To be implemented directly on any ship without additional costs	



## **Applications**

ViscoSense®3/3D systems are used in a variety of systems such as:

### Marine applications

In-line viscosity control is required when (ships) diesel engines or - burners are operated on (heavy) fuel oil, since there is a large variety in quality of this fuel. A correct viscosity ensures an optimal burning efficiency of the fuel, and therefore reduces operating and maintenance costs. Mass flow measurement enables to monitor fuel consumption in kilograms instead of litres. This can be realised by combining ViscoSense®3D density measurement with a positive displacement Flowmeter, which assures best possible accuracy.

### Industrial applications

The ViscoSense®3 sensor is also suitable for the in-line measurement of viscosity of many liquids in industrial applications. In addition, the ViscoSense®3D sensor is suitable for density measurement.

Because individual applications need special attention please contact VAF Instruments for a tailor made solution.

## Options and accessories

### FCM2 Flowcomputer

An FCM2 Flowcomputer can be used for visualization of mass flow measurements, when one or two PT2 Flowmeters are connected in combination with a ViscoSense®3D density sensor.

#### Electric heater control cabinet

The EHC cabinet has been designed for automatic control of the injection viscosity of heavy fuel oil in combination with electric heaters. The control action is realized by heating the fuel oil step by step to an appropriate temperature. The built-in viscosity/temperature controller with its programmed setpoint values activates more or less heater relays. The first stage is controlled by means of time proportional control, which enables a linear control of power from zero to a maximum value. The power required at a certain load is adjusted by switching "ON" or "OFF' a number of stages, while the remaining fraction is added by the time proportional control. Consult factory for more details



FCM2 Flowcomputer



Electric heater control cabinet

## Technical specification

### Sensor

	0.05/50 D ( )	
Viscosity range	0-25/50 mPa.s (other ranges on request, max. 1000 mPa.s)	
Density range*	750-1100 g/I (standard, other ranges on request)	
Temperature range	O-200°C	
Maximum operating temperature	180°C	
Temperature transmitter	PT100 element	
Viscosity accuracy	± 2% instantaneous or 0,5 mPa.s	
Density accuracy*	$\pm$ 0,1% instantaneous or 1 g/l	
Temperature accuracy	± l℃	
Sensor material	Stainless steel 316L / Ni-alloy*	
Coating material	Diamond Like Carbon (DLC)	
Protection class	IP65	
Cable lenght	5 m integrated	
Weight	1 kg	

### Interface box

Isolated active output 4-20 mA, current loop, max. load 400 $\!\Omega$	
Modbus over TCP/IP: all measuring data	
100-230 VAC, 50-60 Hz	
(fluctuations should not exceed 10% of the nominal voltage)	
6 Watt	
Depending on application	
0,1 mPa.s and 1 g/l $$	
-20-55 ℃	
0-95% RH	
Wall mounting	
I acc. IEC 1010-10	
I acc. IEC 664	
2 kg	

<sup>\*</sup>ViscoSense\*3D only



Interface box

## Technical specification

## Controller

General	Fully graphic display ¼" VGA TFT with backlight
Control strategy	Single channel or dual channel
Input viscosity & temperature	4-20 mA
Output control contacts	2 relays, 5A/240 VAC (standard) or analogue (optional)
Output current	Galvanically isolated 4-20 mA for retransmission
Alarm feature	Non-latching band alarm
Scale range viscosity	0-25 mPa.s / 0-50 mPa.s (or as ordered)
Scale range temperature	0-200° C
Power supply	100-240 VAC, 48-62 Hz (fluctuations should not exceed $\pm 10\%$ of the
	nominal voltage)
Power consumption	10 W
Ambient temperature	0-55°C
Operating humidity range	5-95% RH (non-condensing)
Protection class	IPG6/NEMA 4X (front only)
Housing for panel mounting	96 x 96 mm
Weight	0,5 kg



Electronic controller

## Technical specification

## Sensor housing

Material	Ductile iron		
Flange connections			
Pressure rating	PN40		
Weight	10 kg		
Diameter	max. flow m3/h		
DN 50	20		
DN 65	34		
DN 80	51		
DN 100	80		



ViscoSense housing




For Viscotherm replacement a retrofit housing is available. Please refer to Information Bulletin 732


## Dimensions


### Interface box



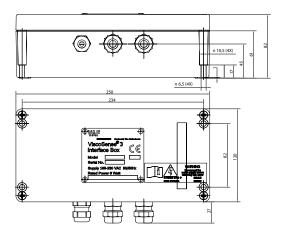


### Controller

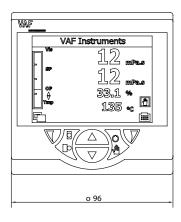

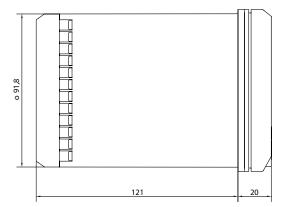


## Dimensions

### Sensor housing

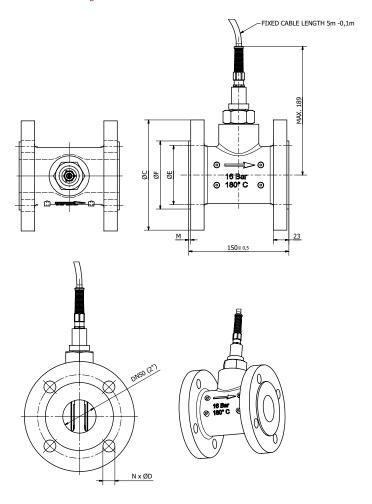

ViscoSense® housing

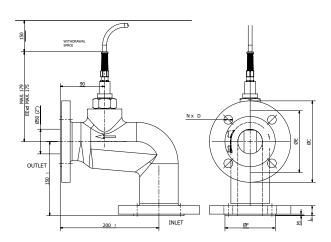

 $Sensor\ housing\ for\ Viscotherm\ replacement$ 

## Quotation and ordering information

5. Density ran 6. Temperatur 7. Fluid type: 8. Flow rate [n 9. Nominal dia 10. Flange type 11. Optional ex  Below information 12. Control valvation medium body materia flange conne	y range: y reading [unit]:	O Fuel viscosity and density m O Viscotherm retrofit O Mass flow measurement (place) O 0 - 25 O mPa.s	ease consult factory) o 0 - 50	OFuel viscosity control OViscoSense® retrofit OBunker receipt / supply (please consult factory) Ospecial:
4. Viscosity ref. 5. Density ran 6. Temperatur 7. Fluid type: 8. Flow rate [n] 9. Nominal dia 10. Flange type 11. Optional ex  Below informatio 12. Control valvation medium body materia flange conne	y reading (unit): range (g/l):	O Mass flow measurement (plate)	00-50	O Bunker receipt / supply (please consult factory)
4. Viscosity ref. 5. Density ran 6. Temperatur 7. Fluid type: 8. Flow rate [n] 9. Nominal dia 10. Flange type 11. Optional ex  Below informatio 12. Control valvation medium body materia flange conne	y reading (unit): range (g/l):	00-25	00-50	
4. Viscosity ref. 5. Density ran 6. Temperatur 7. Fluid type: 8. Flow rate [n] 9. Nominal dia 10. Flange type 11. Optional ex  Below informatio 12. Control valvation medium body materia flange conne	y reading (unit): range (g/l):			Osnecial:
5. Density ran 6. Temperatur 7. Fluid type: 8. Flow rate [n 9. Nominal dia 10. Flange type 11. Optional ex  Below information 12. Control valvation medium body materia flange conne	range [g/l]:	O mPa.s		4 -p
6. Temperatur 7. Fluid type: 8. Flow rate [n 9. Nominal dia 10. Flange type 11. Optional ex  Below informatio 12. Control valv actuation medium body materia flange conne			⊙ cSt	
7. Fluid type:  8. Flow rate [n]  9. Nominal dia  10. Flange type  11. Optional ex  Below informatio  12. Control valvation  medium  body materia  flange conne	ture range [ºC]:	750-1100 (standard)	Other:	
8. Flow rate [n] 9. Nominal dia 10. Flange type 11. Optional ex  Below informatio 12. Control valvaluation medium body materia flange conne		00-100	00-200	
9. Nominal dia 10. Flange type 11. Optional ex  Below information 12. Control valva actuation medium body materia flange conne	e:	OHFO	OMDO	
9. Nominal dia 10. Flange type 11. Optional ex  Below information 12. Control valva actuation medium body materia flange conne		○ MGO	Other:	
Below information  12. Control valva actuation medium body materia flange conne	e [m3/h]:			
Below informatio  12. Control valva actuation medium body materia flange conne	diameter of piping:			
Below information  12. Control valva  actuation  medium  body materia  flange conne	/ре:	ODIN PN [bar]	○ANSI [lbs]	OJIS [K]
actuation medium body material flange conne	extras:			
actuation medium body material flange conne		oviscosity controller	O remote indicator	
actuation medium body material flange conne		o control valve		
actuation medium body material		o flow computer / read-out for mass flow (please consult factory)		
actuation medium body material		O inspection by classification bureau, bureau name:		
actuation medium body materia	tion is only required when 'co	ntrol valve' is selected in ques	stion 11.	
medium body materia flange conne	valve:			
body materia	l	○ electric (relay)	⊖ electric (analog)	
flange conne		osteam	Othermal oil	
	erial	O ductile iron	Osteel	
13. Nominal dia	nnections	ODIN PN [bar]	○ANSI RF [lbs]	OJIS [K]
	diameter of piping:			
14. Inlet press	ssure [bar]:			
15. Nominal flo	flow rate [for steam in kg/h, liqu	uids in m3/h]:		
16. Allowable p	e pressure drop across valve	[max. 1 bar]:		
17. Specific gra				

Please fill out this form and send it to sales@vaf.nl. We will reply with a quotation and ordering information for the requested product or solution a.s.a.p.

For further information see relevant Product Bulletins or www.vaf.nl

Name:

Place and date:



VAF

VAF Instruments B.V.
Vierlinghstraat 24, 3316 EL Dordrecht, The Netherlands
P.O. Box 40, 3300 AA Dordrecht, The Netherlands
T +31 78 618 3100 | info@vaf.nl | www.vaf.nl

Specifications subject to change without notice VAF Instruments B.V. is an ISO 9001 Certified Company Agents and distributors in more than 50 countries